



HOLLROCK ENGINEERING

294 Russell Street PO Box 378 Hadley, MA 01035 www.HollrockGolfRange.com

- DIRECTIONS FOR USE -
- ASSEMBLY INSTRUCTIONS -
- TROUBLE SHOOTING GUIDE -

— DIRECTIONS FOR USE —


- Place washer on level ground.
- Fill with water to overfill hole.
- Add desired amount of non-sudsing soap. If not available a low sudsing automatic dishwashing detergent, or Trisodium Phosphate(available at most hardware stores) may be substituted.
- Flush with hose to clean tub and change water. If balls are exceptionally dirty, a hose may be left trickling into the tub to replenish the water supply.
- To minimize corrosion, rinse and empty water when not in use.
- Store indoors after use.

— WARNING —


- Keep motor dry.
- Use a 115 volt 3 prong power receptacle with electrical ground.
- Be sure brush and motor are in proper position before turning on. Motor shaft may be permanently damaged if not secured inside tub.
- Avoid prolonged storage in direct sunlight. Protect tank from high impact below 40.

- Apply lite oil or soap to the motor shaft. slip brush over motor shaft and line up the cotter pin holes. Insert the cotter Pin and bend out the ends.
- Place brush into inner drum assembly.
 Lower brush bushing will slide over the bottom pin. Screw in the (2) motor bolts. Finger tight is more than sufficient.


Note: Switch box should be on the left side, opposite the opening for the balls.

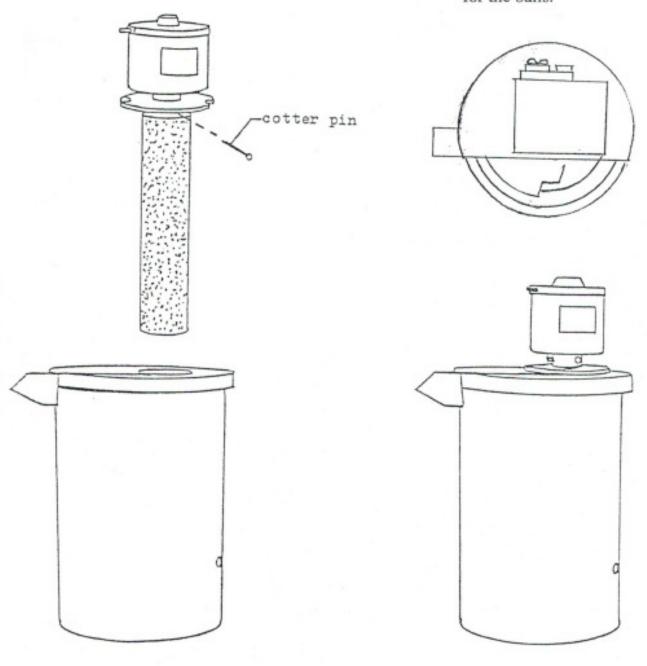


3. Lift motor and motor mounting plate up from Scrub Tub.
Apply lite oil or soap to the motor shaft.
Slip brush over motor shaft and line up cotter pin holes.
Insert cotter pin and bend out the ends.

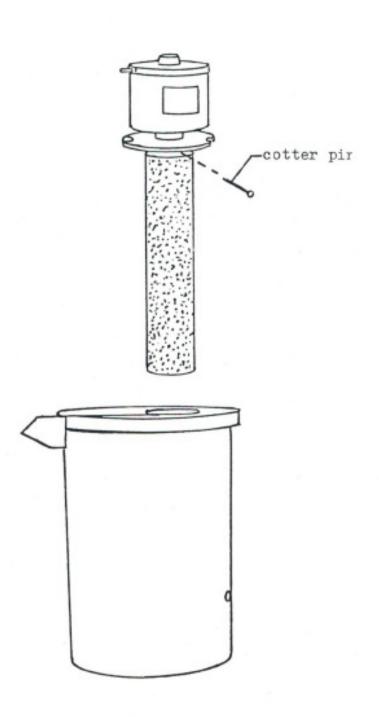


4. Place brush into inner drum assembly. Lower brush bushing will slide over the bottom pin. Screw in the (2) motor bolts. Finger tight is sufficient.

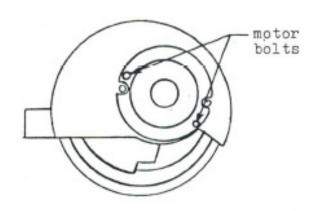

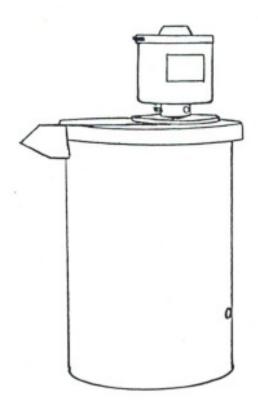

SCRUB TUB TROUBLE SHOOTING GUIDE

TROUBLE	PROBABLE CAUSE	REMEDY
Motor will not start	- balls or other objects jammed inside inner drum	- remove object
	- broken or damaged switch	-replace switch
Motor overheats and clicks off after running a short time	- too much water in tub	-keep water at overflow hole level
	- worn brush	- replace brush
	- worn bottom pin & brush bushing	- replace bottom pin & brush bushing
	- bent motor mount	- repair or replace
	- bent motor shaft	- repair or replace
	- extension cord too long	- use closer to power outlet
Balls do not enter inner drum	- not enough water in tub	- fill to overflow hole
	- too much soap suds	- clean & use low sudsing soap
	- foreign object or broken ball on bottom of tub	- remove object
Balls jam inside inner drum	- worn brush	- replace brush
	- broken inner step	- replace step
	- broken ball inside inner drum	- remove ball
Excessive vibration, cotter pin shears	- motor mount plate bent	- repair or replace
	- motor shaft bent	- repair or replace
	- lower brush bushing worn	- replace bushing
	- bottom pin worn	- replace pin
	- rubber bushing worn	- replace bushing

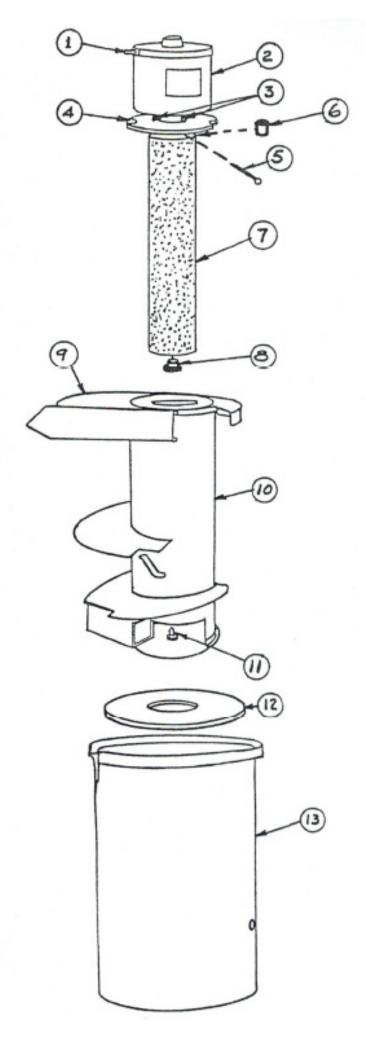

- SCRUB TUB PARTS LIST

- 1 Motor Switch
- 2 Motor (complete) 3 Screw (2)
- 4 Motor Mount Plate
- 5 Cotter Pin
- 6 Rubber Bushing 7 Brush (complete)
- 8 Lower Brush Bushing
- 9 Top Cover
- 10 Inner Drum Assembly 11 Bottom Pin
- 12 Ring Plate
- 13 Tub
- 14 Bolts
- 15 Ball Loading Tray

